




Operation-manuals for studio/apartment

- Electric blinds windows
- Kitchen work light
- Ventilation (heating and air conditioning)
- Microwave-grill-combination
- Cooking / hob

Electric blinds

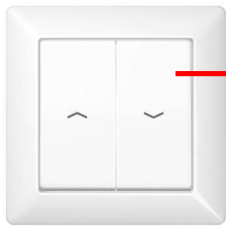

Use these switches next to the windows to raise and lower the electric blinds.


Kitchen work light



To turn on or off the light bar attached under the wall cabinet, please touch the light bar on the right side.

Ventilation (heating and air conditioning)

Attention – When the window is open, no function

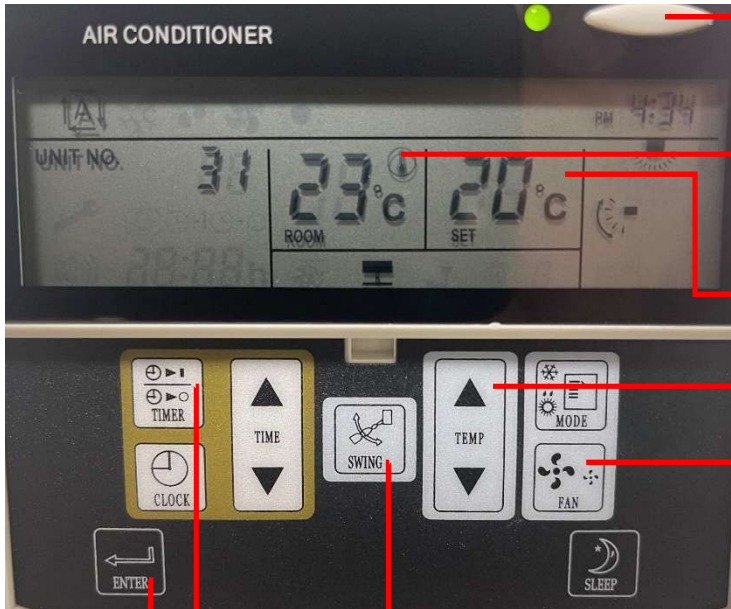

ON / OFF

Current temperature

Desired temperature

Set temperature


Change fan strength

Change ventilation direction

Automatic shutdown (timer)

After making changes, please press >Enter< !

Microwave-Grill-combination

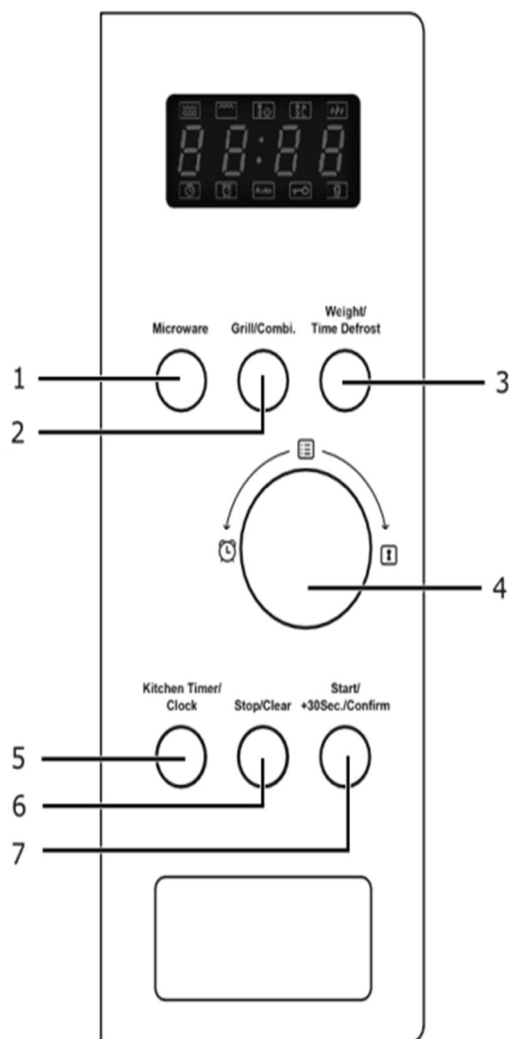

Set time

When the device is connected, the screen displays "0:00", the buzzer sounds once.

1. Press the "5" button twice to select the clock function Hour display flashes.
2. Turn the rotary knob "4" to set the hours.
3. Press the "5" button, the minute display flashes.
4. Turn the rotary knob "4" to set the minutes.
5. Press the "5" button to end the time setting.


Cooking with the microwave

1. Press button "1", the display shows "P100".
2. Turn the rotary knob "4" to select the power (P100; P80; P50; P30; P10).
3. Press the "7" button to confirm the selected power.
4. Turn the knob "4" to set the cooking time.
5. Press button "7" to start the cooking process.

Cooking with the grill/combination

1. Press the "2" button, the display shows "G".
2. Turn the knob "4" to select the mode (G; C-1; C-2).
3. Press the "7" button to confirm the selected mode.
4. Turn the knob "4" to set the cooking time.
5. Press button "7" to start the cooking process.

Cooking / hob

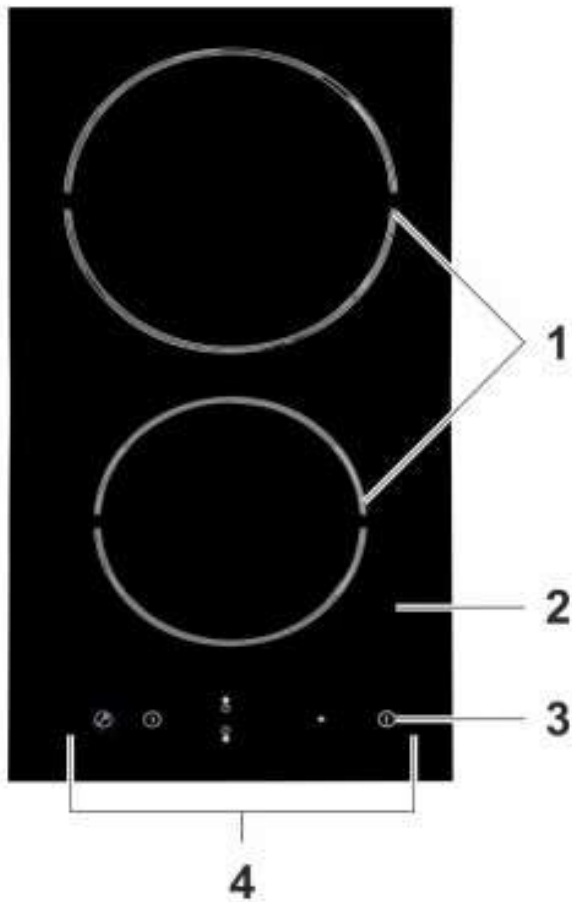


1 - Cooking zones

2 - Glas ceramic plate

3 - On/Off button

4 - Control panel

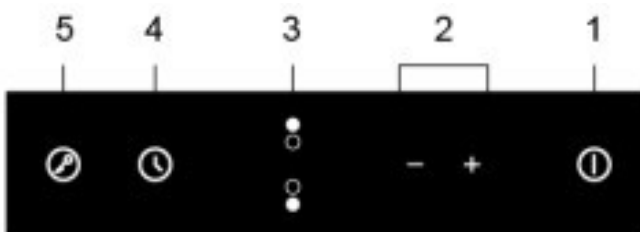

1 - On/Off button

2 - Performance levels

3 - Cooking zone selection buttons

4 - Timer

5 - Lock button (press lock once – hold unlock for 4 seconds)